



5-GND: Play/Pause; 4-GND: Next; 3-GND: Prev; 4-3: VOL+; 5-3: VOL-; 5-4: SD/USB

